













 




 

 
 
 
 
 

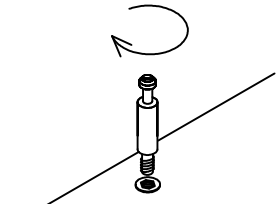
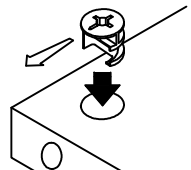
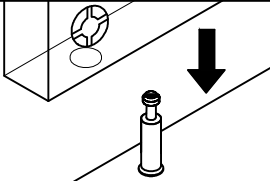
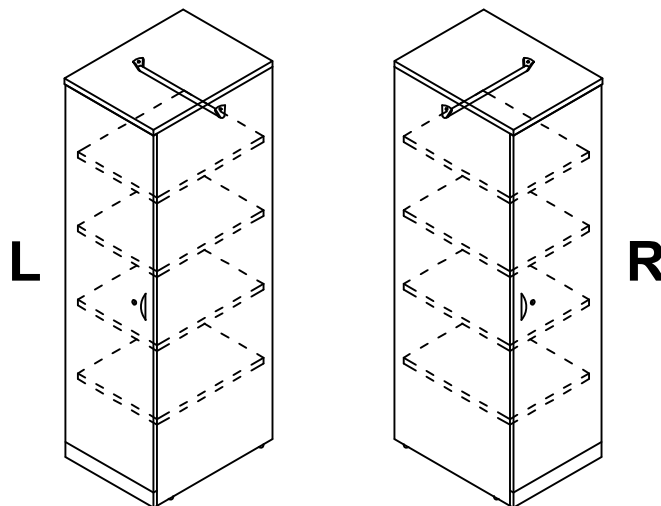


**Thank you for purchasing the Performance Personal Wardrobe .
Please follow these instructions for easy assembly.**

A  Cam Lock 14 Pcs	B  Klix Cam 14 Pcs	C  Housing Cap (Long) 8 Pcs	D  Housing Cap (Short) 6 Pcs	E  Center Shelf Pin 4 Sets	F  Shelf Support Pin 12 Pcs	G  0' Compo Door Hingers 3 Sets	H  Drawer Lock 1 Pc	I  L-Bracket 1 Pc	
J  Screw #3.5 x 20mm 4 Pcs	K  Screw #3.5 x 16mm 4 Pcs	L  Screw #3.5 x 12mm 2 Pcs	M  Metal Scallop Shape Handle 1 Set	N  V Iron Bracket 2 Pcs	O  Hanging Rod 1 Pc	P  Adjustable Glide 4 Pcs	Q  M4 x 65 Allen-Key 1 Pc	R  6 Hole L-Bracket 3 Pcs	S  Screw #6 x 5/8" 18 Pcs
1  Side Panel x 2	2  Back Panel	3  Bottom Panel	4  Kick Plate	5  Top Panel	6  Fixed Shelve	7  Adj. Shelves x 3	8  Door		

KLIX CAM INSTRUCTIONS

1	2	3
		
Line up Cam Lock, turn clockwise.	Insert the cam with the arrow pointing towards the hole in the edge.	Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.



IMPORTANT !!

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

1

Attach Back Panel(2) & Bottom Panel(3) to Side Panel(1) by using Cam Lock(A) and Klix Cam(B).

2

Attach Top Panel(5) to Side Panel(1) by using Cam Lock(A) and Klix Cam(B).
Attach Kick Plate(4) to Side Panel(1) by using Assembled Hardware-WOOD DOWEL.

3

Attach the L-Bracket(R) on the Kick Plate(4) and SIDE Panel(1) / BOTTOM Panel(3).

4

Screw Adjustable Glide(P) into bottom of Side Panel(1).

5

Attach Housing Cap(C or D) to all Klix Cams(B) by pushing neck through center of cam.

6

Insert Center Shelf Pins(E) into the pre drilled holes and place Fix Shelf(6) at convenient distances.

7

Insert Shelf Support Pins(F) into the pre drilled holes and place Adjustable Shelves(7) at convenient distances.

8

Optional: door can be left or right!

Attach Door Hinges(G) to the Door(8) and Side Panel(1).

Insert Drawer Lock(H) into the predrilled hole on the Door(8).

Optional: Fix the V Iron Bracket(N) to both Side Panel(1) and put in the Hanging Rod(O).

Attach the Handle(M) in front of the Door(8) and screw it from behind of the Door(8).

Attach L-Bracket(I) to the Side Panel(1).