 






 

 
 
 


ASSEMBLY INSTRUCTION FOR GALLERY DESK W/O TOP




HARDWARE


1  Cam Lock 20 Pcs	2  Klix Cam 20 Pcs	3  Housing Cap (Long) 11 Pcs	4  Housing Cap (Short) 9 Pcs	5  Adjustable Glide 4 Pcs	6  3" L-Bracket With 6 Holes 6 Pcs	7  Screw #6 x 5/8 " 36 Pcs	8  M4 x 65 Allen-Key 1 Pc	9  Ø8mm Hole Plug 7 Pcs
---	--	---	---	--	---	---	--	--

COMPONENTS

A  Side Panel x 2	B  Desk Top	C  Back Panel
--	--	---

   KLIX CAM INSTRUCTIONS

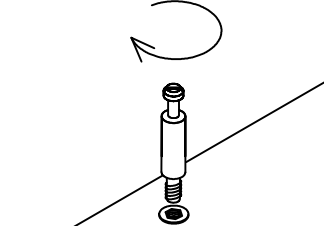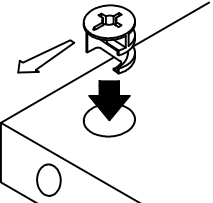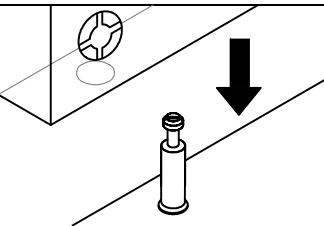1  Line up Cam Lock, turn clockwise.	2  Insert the cam with the arrow pointing towards the hole in the edge.	3  Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.
---	---	--

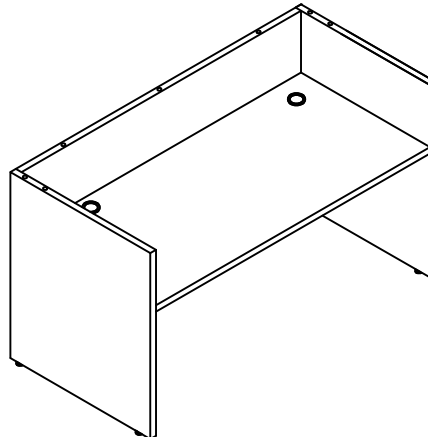 


IMPORTANT :

- Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.


ASSEMBLY INSTRUCTION FOR GALLERY DESK W/O TOP

 1

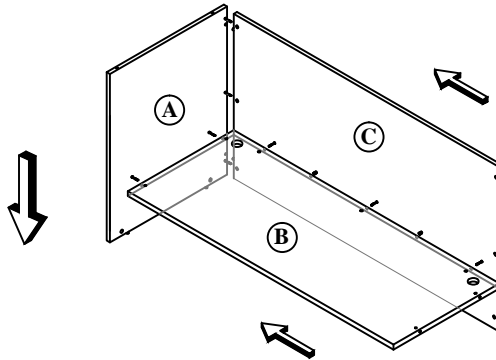

Attach Desk Top(B) and Back Panel(C) to Side Panel(A) by using Cam Lock(1) and Klix Cam(2).

 
2

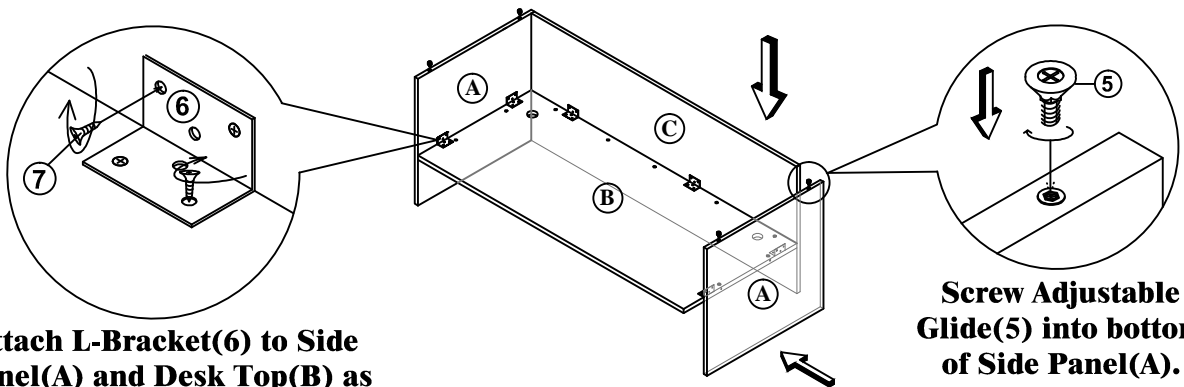

Attach L-Bracket(6) to Side Panel(A) and Desk Top(B) as shown. Tighten Screws(7) securely.


Screw Adjustable Glide(5) into bottom of Side Panel(A).

 3

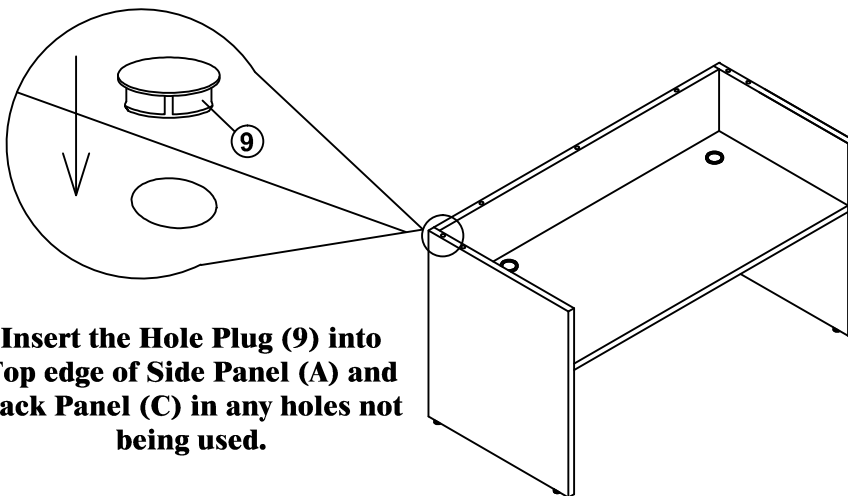

Insert the Hole Plug (9) into Top edge of Side Panel (A) and Back Panel (C) in any holes not being used.

 4

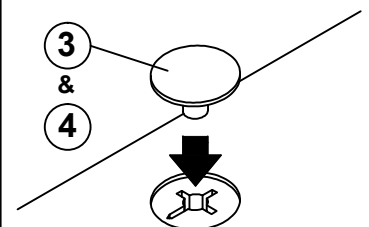

Attach Housing Caps (3,4) to all Klix Cam(2) by pushing neck of cap through center of cam.