





ASSEMBLY INSTRUCTIONS

MODEL: PLTLEGBEV-48/60


Before assembly, please remove all parts from the carton, verifying that you have the correct quantities, and read all the instructions.

INSTRUCTIONS:

A. Installation with Adjustable Main Desk Beam

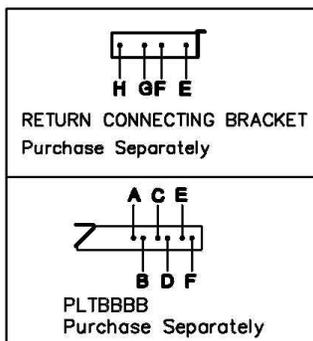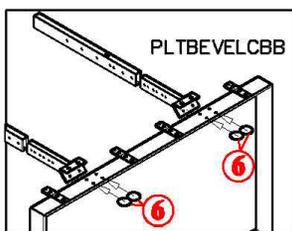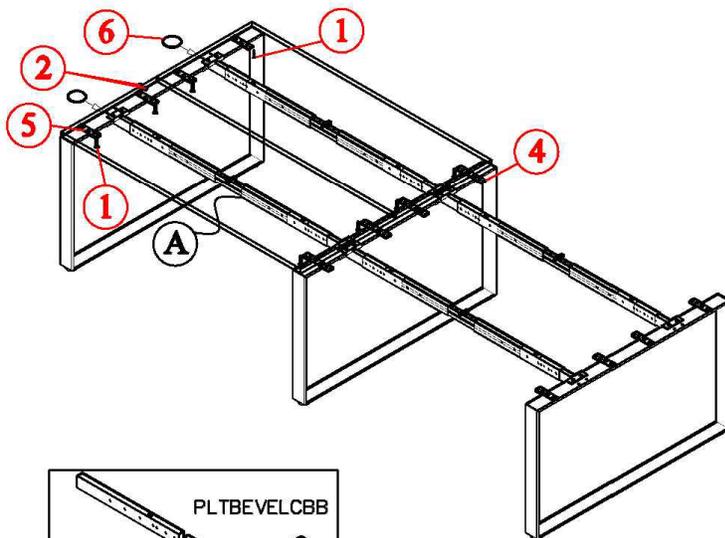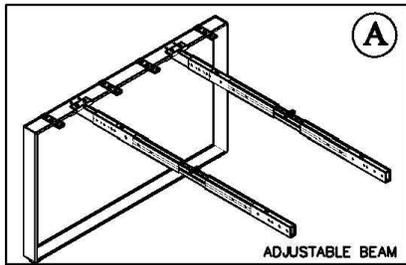

A. Use Part List item 2

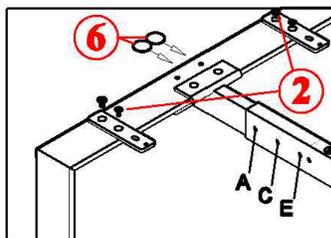

End Leg Connection

1. Please use A, C, and E holes
2. Stick in the end leg screw hole

IN THE CARTON:

PLTLEGBEV 48 / 60 PART LIST

1		Wood Screw x 20 mm	8 pcs
2		Csk Bolts M6 x 12 mm	8 pcs
3		Bolt M6 X 12 mm	4 pcs
4		Intermediate Top Support Bracket	4 pcs
5		End Top Support Bracket	4 pcs
6		Sticker	8 pcs
7		Allen Key M4	1 pc

ADJUSTABLE BEAM

PART LIST

8		Wood Screw x 20 mm	4 pcs
9		Csk Bolts M6 x 12 mm	1 pc
10		Bolt M6 X 12 mm	12 pcs
11		Center Support Block	1 pc

RETURN CONNECTING BRACKET

PART LIST


12		Bolt M6 X 12 mm	2 pcs
----	--	-----------------	-------

PLTB BB

PART LIST

13		Csk Bolts M6 x 12 mm	4 pcs
----	--	----------------------	-------

B. Use Part List item 2

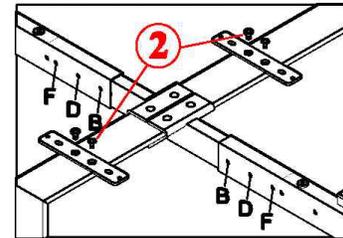

Intermediate Leg Connection

1. Please use B, D, and F holes

ASSEMBLY INSTRUCTIONS

MODEL: PLTLEGBEV-48/60



INSTRUCTIONS:

PLT MAIN DESK BEAM

PART LIST

14		Wood Screw x 20 mm
15		Bolt M6 X 12 mm

B. Installation with Fixed Main Desk Beam

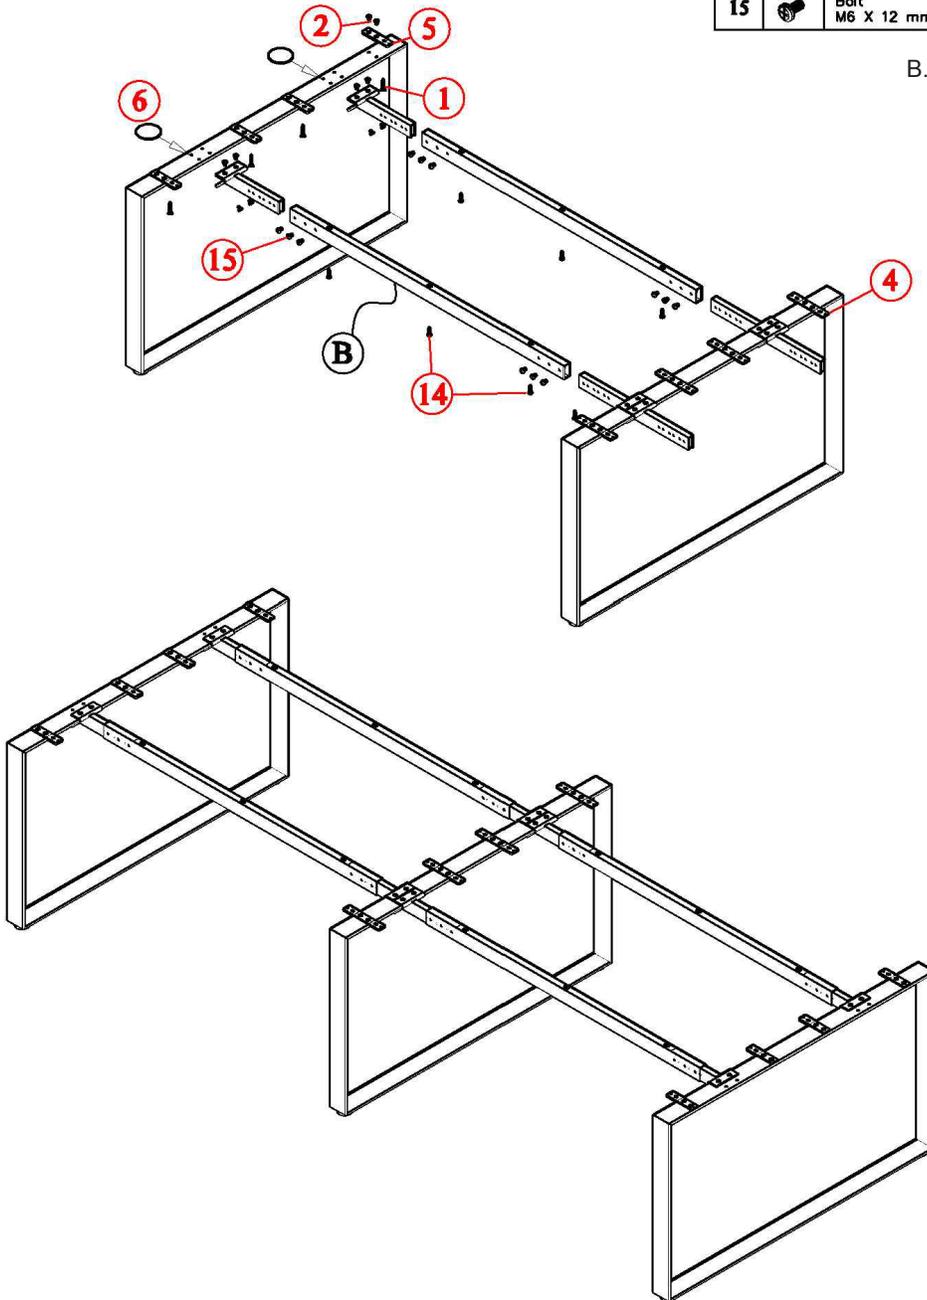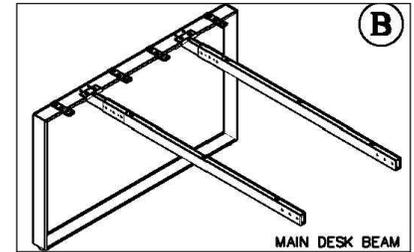

⚠ ATTENTION ⚠

Do not tighten any screws or bolts until the unit is completely assembled.

Ensure all bolts and screws are tightened before using the table, check bolts and screws every 6 months.

If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts.

Failure to follow these warnings may result in injury.