
 


Follow this diagram to adjust your cabinet and hutch doors.


Note: Over time, your doors may shift or sag. This does not mean that the hinges have worn out - they simply need adjusting.

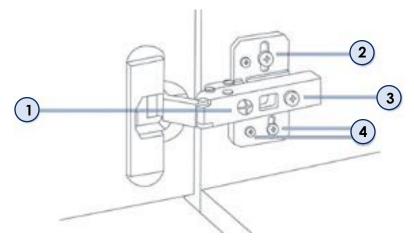

- Sideways / Tilt adjustment
 Turn the screw:
 - **U Clockwise** to move the door further away from the side of the cabinet.
 - **5 Anti-clockwise** to move the door closer to the side of the cabinet.

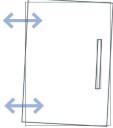

- 2 4 Height Adjustment
 While supporting the weight of the door, turn the screws:
 - ਹ Clockwise to move the door up.
 - **U** Anti-clockwise to move the door down.

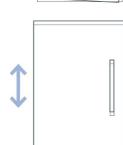

- 3 Forward and back adjustment
 If the gap between the back of the door and the cabinet is too small, the
 door may not close fully. Turn the screw:
 - **U Clockwise** to decrease the gap between the door and the cabinet.
 - **The Anti-clockwise** to increase the gap between the door and the cabinet.

