


## PL 107 BOX / FILE PEDESTAL

Thank you for purchasing the Performance Box / File Pedestal. Please follow these instructions for easy assembly.


programmer and the state of the			•	
1 (mm) (mm)	2	3	4	[6 _
32mm Metal				<b>###</b>
Scallop Shape Handle 2 Sets	File Clip 2 Pcs	302 x 16 x 3mm Aluminum Bar 1 Po	M4 x 65 Allen-Key 1 Pc	JCBC Screw M6 x 40mm = 4pcs X Washer = 8pcs
6	7	(pmm>	° R	10
6 Hole L-Bracket 2 Pcs	Screw #8 x <b>%</b> " 12 Pcs	#8 x 1½" Pan Head Screw 2 Pcs	Keys 1 Set	Pencil Tray 1 no.

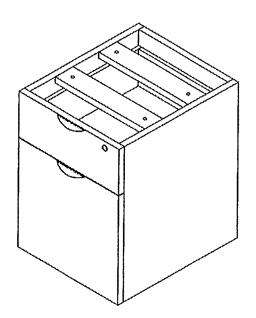


## **IMPORTANT!!**


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.



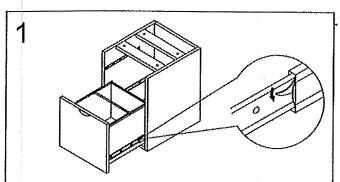



Remove drawer from pedestal. Fully open drawer.
Where first slide meets second slide there is a small clip. Pull the clip on the left hand slide up, push the clip on the right hand slide down. Pull drawer out.

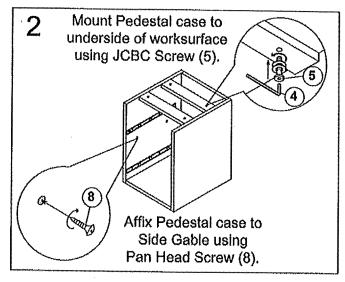

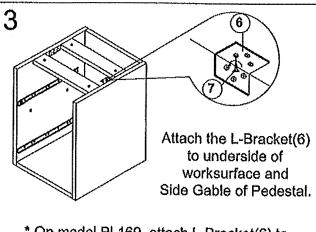

\* On model PL169, attach L-Bracket(6) to bottom of Pedestal and Side Gable of desk.

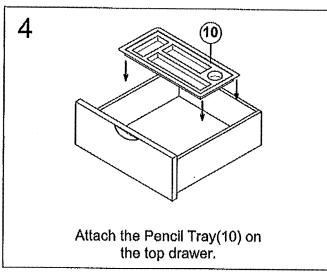

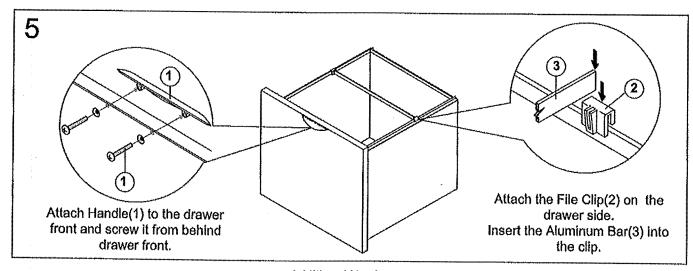

Additional Hardware.

Please note that Performance Office Furnishings has enclosed additional hardware to allow you to attach this box / file pedestal to underside of most desk.