

Thank you for purchasing the Performance Laminate Door Set.  
Please follow these instructions for easy assembly.


PURCHASE SEPARATELY

1 Door Stopper 2 Pcs	2 15' Compo Door Hinges 2 Pairs	3 833 L-Bracket 2 Pcs/1Set	4 Screw #3.5 x 12mm 4 Pcs	5 Cabinet Lock 2 Pcs/1 Set	6 Screw #3.5 x 20mm 4 Pcs/1Set	7 Assembly template 1 Pc/1Set
----------------------------	--	----------------------------------	------------------------------------	----------------------------------	---	-------------------------------------


A OPEN HUTCH 1 Pcs	B DOOR x 2 Set (LR-2 Pcs Per Set)
--------------------------	---

**OPTION 2**

**1**

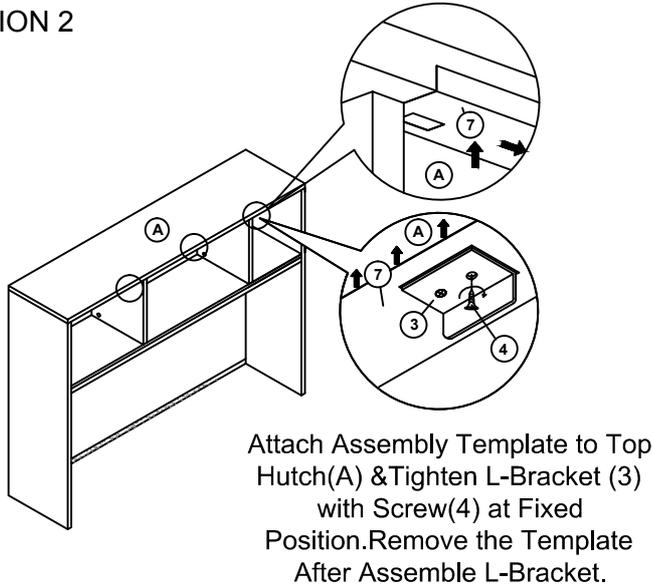


**2**

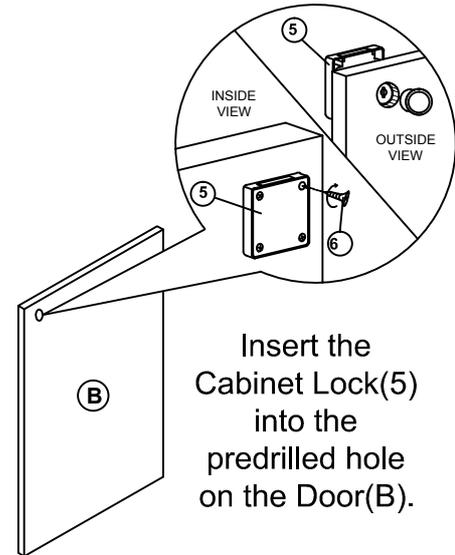


**3**

Attach the Doors Panel (B) x 2 SETS to the Center Vertical Panel and Side Panel of OPEN HUTCH (A) with Hinges (2).

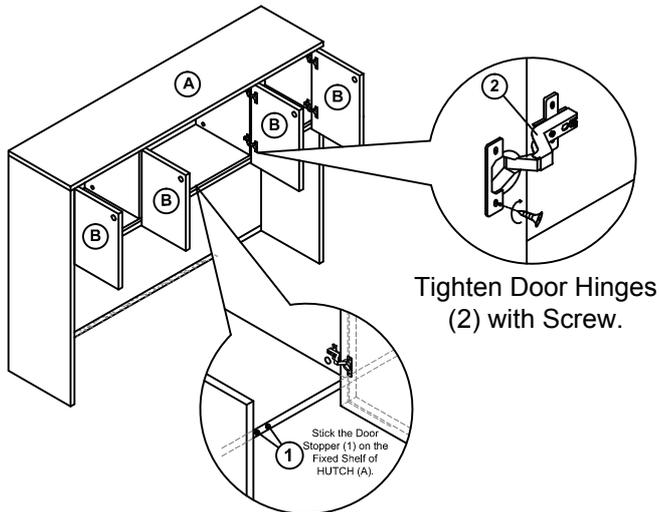

**4**

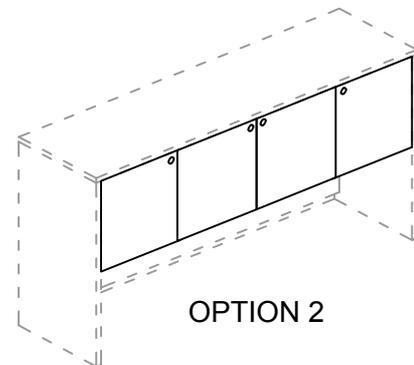

**IMPORTANT !!**

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.