
ASSEMBLY INSTRUCTION FOR - V LEGS USED WITH PLT AND PLBE TABLE TOPS

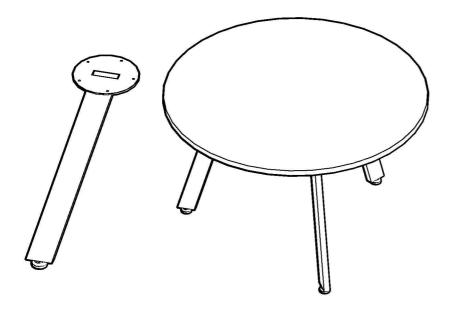

INCLUDED LEG HARDWARE:

O Immuni	Wood Screw x 20 mm	5 pcs
-----------------	-----------------------	-------

- 1. Place table top upside down on clean surface .
- 2. Line up holes at top of V-Leg with holes on underside of table top. Make sure leg is angle outward.



